
松電舎 トリガー端子付き DN3UVCカラーカメラ

Synview セットアップ手順書

Linux

Synview のセットアップ

Synview は ARM 系 CPU では使用できません。
Intel 系 CPU を使った Linux で使用してください。

セットアップを行う前に

インターネットに接続している状態にしてください。

パッケージリストの更新とインストールされているパッケージを更新してください。

※ ターミナル(端末)を起動し、下記のコマンドを順番に実行してください。

```
# sudo apt update  
# sudo apt upgrade
```

セットアップの手順

USB メモリトップの「_Synview」 → 「Linux 版 Synview x.xx.xxx.xxxx」フォルダ内にある下記のどちらかのファイルを OS に合わせて、デスクトップへコピーしてください。

(x.xx.xxx.xxxx はバージョン番号)

64bit 版: **synview-x. xx. xxx. xxxx-x64. deb**


32bit 版: **synview-x. xx. xxx. xxxx. deb**

(x.xx.xxx.xxxx はバージョン番号)

ターミナル(端末)を起動し、下記のコマンドを順番に実行してください。

```
# cd Desktop  
# sudo dpkg -i デスクトップへコピーしたファイル名
```

下図のような表示がターミナル(端末)上に表記されるとセットアップ完了です。

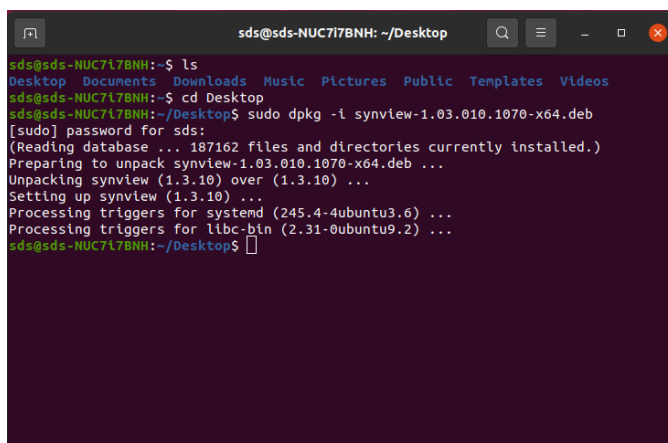

```
sds@sds-NUC7i7BNH: ~/Desktop  
sds@sds-NUC7i7BNH:~$ ls  
Desktop  Documents  Downloads  Music  Pictures  Public  Templates  Videos  
sds@sds-NUC7i7BNH:~$ cd Desktop  
sds@sds-NUC7i7BNH:~/Desktop$ sudo dpkg -i synview-1.03.010.1070-x64.deb  
[sudo] password for sds:  
(Reading database ... 187162 files and directories currently installed.)  
Preparing to unpack synview-1.03.010.1070-x64.deb ...  
Unpacking synview (1.3.10) over (1.3.10) ...  
Setting up synview (1.3.10) ...  
Processing triggers for systemd (245.4-4ubuntu3.6) ...  
Processing triggers for libc-bin (2.31-0ubuntu9.2) ...  
sds@sds-NUC7i7BNH:~/Desktop$
```

